

will need to repeat the procedure from step C2 or continue with the normal operation.

C10. Repeat steps C1 through C9 to program another device. Now when your remote control is programmed, you can press the appropriate mode key on the remote control to enable control of the selected device. To use the remote control for your Motorola VIP unit, press the STB mode key.

D. Resetting the remote control to the Factory Default Settings

D1. Press and hold simultaneously the STB and SET key for 3 seconds. The LED above the STB key will turn on to indicate that the remote control is in programming mode.

D2. Enter the programming code "901" by pressing the appropriate numerical keys and the LED will flash 3 times and remain lit to indicate a successful reset initiation.

D3. To save the reset, press the STB key and the LED above the STB key will flash 3 times and turn off, indicating a successful programming. The remote control will return to normal operation.

The remote control is now reset to factory default settings. If you want to control a TV set or another device you need to reprogram the mode keys TV and AUX.

Note: - If an invalid key is pressed, the LED will give a long flash and turn off. The remote control will return to normal operation.

- Should the remote control timeout (after 20 seconds) before completing the procedure, you will need to repeat the procedure from step D1 or continue with the normal operation.

Caring for the Environment by Recycling
When you see this symbol on a Motorola product, do not dispose of the product with residential or commercial waste.

Recycling your Motorola Equipment
Please do not dispose of this product with your residential or commercial waste. Some countries or regions, such as the European Union, have set up systems to collect and recycle electrical and electronic waste items. Contact your local authorities for information about practices established for your region. If collection systems are not available, call Motorola Customer Service for assistance.

www.motorola.com/recycling
Please recycle this document.

© 2008 Motorola, Inc.
The Motorola logo and the esmignia are registered trademarks of Motorola, Inc.

The remote control keys controlling the IP set-top box

LED
The lights indicate which device is currently controlled by the remote control, and the respective LED will light up each time a key is pressed.

Mode (TV, STB, AUX)
To select the device to control with the remote control unit.

AV
To change TV input source.
Note: After programming this key always controls the TV set input, also when the remote is in STB or AUX device mode.

Mute
To disable or enable the sound.

Volume
To adjust the sound level.

Navigation keys
Use the 4 arrow keys (▲▼◀▶) to move within the menus and portal pages. OK selects the marked option.

Back
Go back to the previous selection or page.

Info
To display information of the current programme.

Stop
To stop loading the current web or portal page.

WWW
To enter Internet mode.

Color keys
To select color-coded shortcuts in portal or teletext pages.

Music
Shortcut to music application.

DVR
Shortcut to Digital Video Recording page.

Portal
To open the portal main page.



Standby
To set the device to standby mode. To switch the device on again, press standby by once again.

Menu
To display or exit from the menu.

Set
To program the remote control with the functionality of a new device. You may program any key to control a different device than initially indicated on it.

Numerical keys (0-9)
For direct access to programmes. For a 2 digit programme number, the 2nd digit must be entered before the dash disappears. The numerical keys can also be used to input text (SMS-type keypad).

Electronic Programme Guide
To display the programme list of current and future programmes for different channels.

Programme selection
Use ▲▼ to access the next or previous channel (in TV mode).

Scroll lock
To toggle between navigation (move between available options) and scroll (move a page).

TV
To watch TV.

Text
To open teletext pages.

Keyboard
To open the virtual keyboard on screen, and enter text with the navigation keys.

Video keys
To control Video on Demand (VoD) movies or recorded sequences.

Games
Shortcut to games application.

Radio
Shortcut to radio application.



MOTOROLA

Manufacturer Code List

Manufacturer	Code	Manufacturer	Code	Manufacturer	Code
ADMIRAL	002, 033, 050, 091, 099, 161, 238	ADYSOM	178	ADIRAL	002, 093, 117, 118
AIRAM	075	AKIRA	075, 079, 099, 117, 118, 162, 165	ALBERAL	012, 099, 119, 120, 212
ALORGEN	117, 118	AMSTRAD	002, 053, 054, 091, 168	ANAM	056
ANGEL	002	ANITECH	002, 012	ARC EN CIEL	041, 148
AREAM	041, 117, 118, 148, 152, 241	ARE EN CIEL	045, 065, 134	ARISTONA	005, 006, 012
ARTHUR MARTIN	025, 050, 099	AS-BERG	012	ASA	023, 033, 042, 043, 050, 099, 107, 110, 114, 198, 238
ASBERG	012	ASUKA	075, 091, 117, 118	ATLANTIC	012, 117, 152
ATLANTIC	117, 148, 162	ATLANTIC	002	AUDIOSONIC	002, 117, 118
AUTOVOX	027, 028, 068, 092	AUTOVOX	027, 028, 032, 033, 043, 050, 092, 093, 107, 114, 117, 118, 120, 205, 206, 242	BAIRD	025, 045, 070, 099, 161, 162
BAND & JULIFSON	033	BAND	033, 134, 198	BAND	075
BASIC LINE	002	BAUER	002	BAUR	009, 090, 090, 099
BEKO	230	BEZIN	012	BESTAR	002, 091
BIANONE	117, 118	BIANONE	060, 063, 174, 201, 203, 240, 246, 247, 248, 251	BONDSTEK	129
BOUTIS	117, 118	BRANDT	041, 045, 065, 100, 132, 153, 194	BRION VEGA	001, 033, 227, 228
BRUNNEN	012, 032, 033	BRUNNEN	117, 118, 192	BRUNNEN	033, 109, 238
BRUNNEN	002, 009, 050, 099, 108, 161, 162	BUSH	009, 011, 012, 023, 029, 050, 058, 075, 079, 099, 161, 165, 168, 169, 237	BUSH (UK)	090, 114
BUSH (USA)	018	CANDLE	012	CATHAY	033, 120, 238
CENTURY	002, 009, 027, 028, 050, 056, 092, 096, 099, 120, 155, 153, 161, 162, 174, 175, 178, 177, 181, 207, 242, 244, 245, 250	CENLINE	002, 079	CITIZEN	013, 018
CLARVOX	033, 109, 116, 119, 168	CLATRONIC	028, 075, 091, 117, 118, 120, 165, 230	CONCERTO	018
COCORDE	002	COCORDE	002, 012, 092, 117, 118, 152, 213, 230	CONTEC	002, 045, 056, 058, 106, 117, 118
CONTINENTAL EDISON	041, 045, 065, 100, 132, 133, 134, 148	CRAG	096	CROSBLEY	027, 028, 033, 050, 092, 099, 120, 161, 162, 174, 175, 176, 177, 191, 238
CROWN	002, 013, 023, 063, 075, 200	CRYSTAL	012	CS ELECTRONIC	117, 118, 120, 242
CVC	120	CVC CLATRONIC	012, 040, 075, 120, 212	CVC EXILUST	012
CYBERTRON	075	DAEWOO	002, 012, 013, 075, 117, 118, 165, 220	DANISH	012, 091
DANSAL	002, 013	DAYTRON	002, 013	DECCA (UK)	004, 005, 092, 093, 095, 116, 117, 118, 148, 178, 190, 236
DECCA	025, 117, 118, 149	DESMAR	015, 050, 070, 095, 161	DESMAR	213
DIXI	002	DIXI	002, 012, 109	DUAL	002, 012, 109
DUAL	012, 002, 001, 033, 040, 042, 043, 050, 092, 099, 107, 110, 112, 117, 118, 179	DUAL-TEC	009, 117, 118	DUMONT	012, 002, 001, 033, 040, 042, 043, 050, 092, 099, 107, 110, 112, 117, 118
DYNATRON	012	ELBE	050, 099, 104, 116, 117, 118, 116, 199, 200, 243	ELECTROPHONE	012
ELECTROPHONE	116, 122	ELEN	002, 042, 050, 117, 118	ELITE	165, 169, 180
ELVAN	009, 040, 099	ELTA	002, 161	EMERSON	013, 025, 033, 054, 055, 056, 097, 213
ERRES	005, 012	ETRON	005, 099	EUROROMAN	117, 118
EUPHONION	009, 040, 099, 116, 117, 118, 120, 122, 149, 236, 242	FENNER	002	FERRIS	001, 019, 026, 045, 050, 059, 100, 107, 119, 144, 146, 154, 155, 165, 168, 169
FIDELITY	001, 019, 026, 045, 050, 059, 100, 107, 119, 144, 146, 154, 155, 165, 168, 169	FIDELITY (UK)	050, 147, 150	FINLANDIA	043, 050, 070, 099
FINLANDIA	040, 042, 043, 050, 099, 109, 117, 118	FINLUX	012, 023, 027, 028, 031, 033, 034, 042, 043, 050, 099, 109, 117, 118, 120, 130, 153, 155, 161, 162, 169	FIRST LINE	002, 012, 050, 099, 115, 117, 118, 242
FISHER	033, 042, 045, 050, 099, 070, 098, 106, 112, 117, 118, 126, 161, 162, 162, 230, 239	FLINT	012	FORNENTI	012, 002, 012, 027, 028, 033, 050, 092, 096, 117, 118, 162, 213, 238
FORMENTI	060, 060, 099, 150	FRONTTECH	002, 050, 051, 099, 120, 155, 161, 162, 242	FRONTTECH	002
FRONTRONIC	025, 050, 055, 161, 205, 239	FUNAI	002, 055, 056, 091, 106, 112, 155, 239	FUTURETECH	059
GBC	002, 009, 050, 058, 075, 099, 101, 162	GEC	012, 014, 025, 050, 099, 116, 117, 118, 161, 164, 178, 238	GER (UK)	009, 014, 025, 050, 099, 117, 118, 149
GELOSO	002, 009, 050, 075, 099, 120, 242	GENERAL TECHNIC	002	GENEXIA	050, 075, 099, 161
GENEXIA	012, 211	GIUCAR	005, 011, 012, 025, 050, 058, 098, 103, 168, 169	GJORNJE	012, 211
GOPI	002, 075	GRABETZ	005, 099	GRANADA	005, 011, 012, 025, 027, 028, 047, 050, 056, 096, 070, 099, 116, 117, 118, 145, 161, 176, 187
GRANADA (UK)	028, 050, 058, 077, 099, 117, 118, 149	GRANDIN	241	GRIFFIN	119
GRUNDIG	002, 033, 024, 027, 029, 065, 066, 098, 100, 114, 158, 240	HAIJAFIX	001, 117, 118	HAMPTON	045, 065, 134, 149
HANSAETIC	012, 116, 149	HANTAREX	012, 116, 149	HEMMERAMANN	050, 099
HENTON	045, 065, 134, 149	HIGASHI	117, 118	HINARI	002, 009, 011, 050, 055, 058, 075, 161, 162, 169, 176
HINARI	002, 009, 011, 050, 055, 058, 075, 161, 162, 169, 176	HISAVIA	239	HITACHI	009, 011, 014, 015, 016, 036, 037, 043, 045, 050, 056, 058, 062, 064, 065, 066, 076, 084, 099, 100, 117, 118, 137, 151, 157, 163, 164, 169
HYPERR	002, 009, 075, 117, 118, 120, 150	HYPERSON	012, 075, 091, 117, 118	ICE	075
ICE	075	IMPERIAL	006, 027, 028, 050, 092, 099, 120, 135, 153, 174, 175, 176, 191, 201, 242, 250	INGERSOLL	002
INGERSOLL	002, 012, 025, 028, 075, 103, 117, 118, 149, 179	INNOHT	002, 025, 050, 103, 116, 117, 118, 120, 150	INNOVATION	012, 293
INTERLUK	002, 120	INTERLUK	005, 059, 012, 028, 033, 045, 056, 095, 143, 238	INTERVISION	009, 012, 117, 118, 120, 218, 219
IRRADIO	002, 012, 027, 028, 068, 075, 092, 103, 138, 141	ISUKAI	075	ITC	117, 118
ITC	117, 118	ITS	012, 075, 168	ITT	009, 011, 022, 028, 042, 050, 070, 079, 099, 143, 156, 162, 163, 169, 180
ITT-NOKIA	009, 011, 022, 042, 050, 070, 079, 099, 143, 156, 168, 194	JET POINT	117, 118	JOHNSON	117, 118
JOHNSON	117, 118	JVC	011, 017, 022, 033, 045, 058, 099	KAISER	099
KAMOSONIC	117, 118	KARSH	012, 043, 050, 117, 118, 150, 224, 225, 226	KARSH	012, 043, 050, 117, 118, 150
KARSH	012, 043, 050, 117, 118, 150	KATSUI	075	KAWASO	012
KATSUI	075	KAWASO	117, 152	KENRO	002, 040
KENRO	002, 040	KENWEE	002, 050, 090, 161, 162, 199	KINSELEY	117, 118
KINSELEY	117, 118	KNERSSEI	243	KOLSTER	212
KONKA	168	KORTING	033, 103, 238	KTV	013, 055, 117, 118
KORTING	033, 103, 238	KYOTO	099, 161, 162	LENOVO	002, 117, 118
LENOVO	002, 117, 118	LESA	120, 242	LEYED	159
LESA	120, 242	LG	002, 008, 012, 013, 018, 043, 050, 087, 098, 103, 109, 152, 197, 242	LIFETEC	002, 012, 091, 263
LEYED	159	LIFETEC	002, 012, 091, 263	LLOYTRON	013
LLOYTRON	013	LUXOR	012, 028, 102, 116, 149, 178, 236, 239, 240	LUXOR	091, 155
LUXOR	091, 155	M-ELECTRONIC	002, 040, 043, 050, 110, 112, 120, 130, 220	MAGNADYNE	002, 008, 012, 033, 040, 050, 098, 116, 120, 122, 149, 210, 238, 239, 242, 027, 029, 040, 050, 052, 116
M-ELECTRONIC	002, 040, 043, 050, 110, 112, 120, 130, 220	MAGNADYNE	002, 008, 012, 033, 040, 050, 098, 116, 120, 122, 149, 210, 238, 239, 242, 027, 029, 040, 050, 052, 116	MAGNAFON	117, 149, 150, 152, 117, 118, 238
MAGNAFON	117, 149, 150, 152, 117, 118, 238	MANESTH	012	MARANTZ	012
MANESTH	012	MARCH	002, 075	MARELLI	033, 238
MARCH	002, 075	MARK	012	MATSUI	002, 012, 025, 050, 054, 058, 071, 079, 099, 117, 118, 164, 165, 168, 187
MARELLI	033, 238	MARK	012	MAUXMIAL	050, 059
MARK	012	MAUXMIAL	050, 059	MEDIATOR	010
MATSUI	002, 012, 025, 050, 054, 058, 071, 079, 099, 117, 118, 164, 165, 168, 187	MEDIATOR	010	MEMOREX	002
MAUXMIAL	050, 059	MEMOREX	002	METZ	002, 025
MEDIATOR	010	METZ	002, 025	MSA	033, 060, 063, 080, 097, 108, 159, 160, 222, 238, 240
MEMOREX	002	MSA	033, 060, 063, 080, 097, 108, 159, 160, 222, 238, 240	MICROMAXX	012, 263
METZ	002, 025	MICROMAXX	012, 263	MINERVA	022, 024, 027, 028, 060, 063, 098, 114
MINERVA	022, 024, 027, 028, 060, 063, 098, 114	MITSUBISHI	002, 004, 008, 011, 012, 053, 044, 048, 058, 060, 063, 067, 073, 161	MIVAR	027, 028, 103, 104, 114, 116, 117, 118, 121, 122, 149, 150, 152, 238
MITSUBISHI	002, 004, 008, 011, 012, 053, 044, 048, 058, 060, 063, 067, 073, 16				

